 


6 Changing of temperature gauge unit:

You can select the temperature gauge unit.

- 1 Press the **SEL** button to select "°F" or "°C."



- 2 To end the selection, press the **SET** button.

The control is automatically switched from the setting mode to the ordinary display if the button is not pressed for about 30 seconds. Even in this case, established setting is maintained.