

Indicators

(P) Parking brake indicator
Lights as a reminder that you have not released the parking brake lever.

(ABS) ABS (Anti-lock Brake System) indicator

Comes on when the ignition switch is turned on. Goes off when your speed reaches approximately 6 mph (10 km/h).

If it comes on while riding: ➔ P.106



High coolant temperature indicator

If it comes on while riding:

➔ P.104



Low oil pressure indicator

Comes on when the ignition switch is turned on.
Goes off when the engine starts.

If it comes on while engine is running: ➔ P.105



PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)

Comes on briefly when the ignition switch is turned on with the engine stop switch in the (Run) position. Comes on when the ignition switch is turned on with the engine stop switch in the (Off) position.

If it comes on while engine is running: ➔ P.105

