

Switches

Shift up switch (+)

To shift up the gear.

➡ P.42

Shift down switch (-)

To shift down the gear. ➡ P.42

Turn signal switch


▶ Pressing the switch turns the turn signal off.

 
Horn button

Headlight dimmer/Passing light control switch

- ≡D : High beam
- ≡D : Low beam
- ≡D **PASS** : Flashes the high beam headlight.

Engine stop switch

Should normally remain in the  (Run) position.

▶ In an emergency, switch to the  (Off) position to stop the engine.

AT/MT switch

To shift between the AT MODE and MT MODE.

➡ P.41

N-D switch

To shift between Neutral and AT MODE. ➡ P.41

Start button

Hazard switch

Switchable when the ignition switch is on. Can be turned off regardless of the ignition switch position.

▶ The signals continue flashing with the ignition switch is OFF or LOCK position after the hazard switch is on.