

# Parking Brake

## Parking Brake Lever

Be sure the parking brake is applied while parking and warming up the engine.

- ▶ Make sure the parking brake lever is released before riding.

### To apply the parking brake

Squeeze the front brake lever and pull the parking brake lever back to lock the rear wheel.

- ▶ The parking brake lock will not function if the parking brake is not adjusted properly.

➔ P.92

### To release the parking brake

Release the parking brake lever by lightly pulling in the lever.

- ▶ Before riding, check that the parking brake indicator is turned off and make sure that the parking brake is fully released so there is no drag on the rear wheel.

