

## Changing between Neutral and AT/MT

### Changing from Neutral (N) to AT MODE

Press the D/S side of the N-D switch (①).  
The D mode indicator to come on, "1" is shown in the gear position indicator and first gear is selected.

### Changing from AT or MT MODE to Neutral

Press N on the N-D switch (②).

### Changing between D mode and S mode while in AT MODE

Press the D/S side of the N-D switch. The S or D mode indicator to come on (③,④).

### Changing between AT MODE and MT MODE

Press the AT/MT switch (⑤).

The S or D indicator goes out while MT MODE is selected (⑥).

