

Shifting Gears *(Continued)*

Riding in MT MODE

Shift up and down with the + and - switch.

The selected gear is shown on the gear position indicator.

- ▶ If the MT MODE is selected, the transmission does not shift up automatically. Do not allow the engine revs to go into the red zone.
- ▶ The transmission automatically shifts down when you slow down, even in MT MODE.
- ▶ You will start from 1st gear even if MT MODE is selected.

Gear shift operation

Shifting Up:


Press the shift up switch (+) (7).

Shifting Down:

Press the shift down switch (-) (8).

You cannot continue shifting gears by keeping the shift switch pressed.

To continue shifting gears release the switch and press it again.

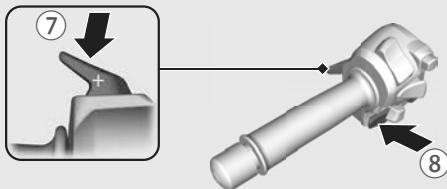

Shift Limit

You cannot downshift if the engine will exceed the rev limit. ➔ P. 37