


Rear Seat (Backrest)

You can fold back the rear seat and use it as a backrest. The backrest angle can be adjusted to three levels.

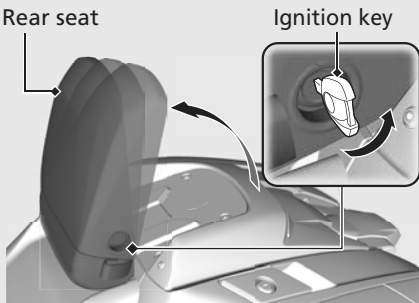

To fold back

- 1 Insert the ignition key into the lock. Fold back the rear seat while turning the key counterclockwise and holding it.
- 2 Remove the ignition key.

To return

- 1 Insert the ignition key into the lock. Use your hand to support the rear seat, do not let the rear seat fold down quickly. Return the rear seat to its original position while turning the key counterclockwise and holding it.
- 2 Remove the ignition key.

! WARNING

If you ride with a passenger when you are using the rear seat as a backrest, your passenger can be killed or seriously hurt by such as falling down from motorcycle because your passenger cannot ride with proper position.

Do not carry a passenger when you are using the rear seat as a backrest.