


Front Seat

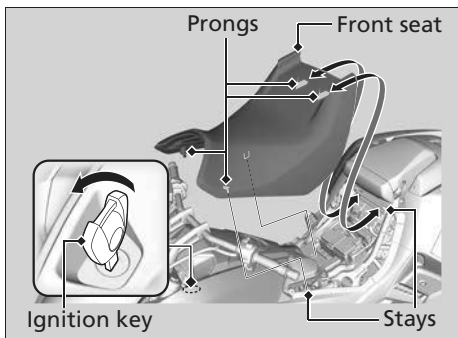

Removal

1. Insert the ignition key into the seat lock, and turn it counterclockwise.
2. Pull the front seat forward and up.

Installation

1. Insert the front and rear prongs into the front and rear stays on the frame.
2. Push back and down on the front of the seat until it locks in place. Make sure that the front seat is locked securely in position by pulling it up lightly.

The front seat locks automatically when closed. Take care not to lock your key in the under seat compartment.