


## Right Under Cowl

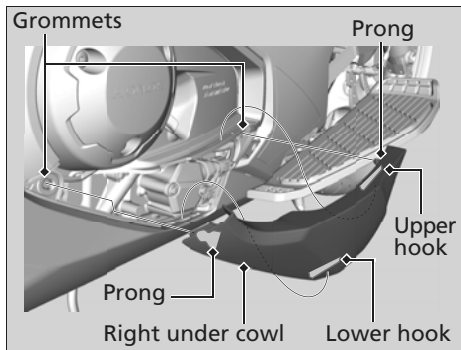

### Removal

1. Remove the upper hook on the right under cowl from the slot on the engine cover.
2. Remove the prongs from the grommets.
3. Remove the lower hook on the right under cowl from the slot.
4. Remove the right under cowl.

### Installation

1. Insert the lower hook on the right under cowl to the slot.
2. Align the prongs with the grommets.
3. Push the prongs in.
4. Insert the upper hook on the right under cowl to the slot on the engine cover until it latches.