


Adjusting the Brake Light Switch

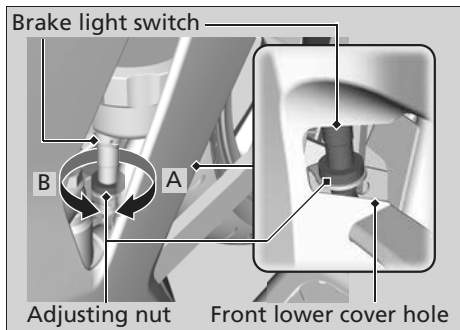


Check the operation of the brake light switch.

Insert hands from front of the front lower cover hole.

Hold the brake light switch and turn the adjusting nut in the direction A if the switch operates too late, or turn the nut in the direction B if the switch operates too soon.

Inspecting the Parking Brake

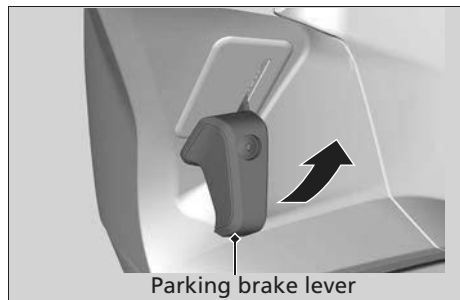

Place your motorcycle on a firm, level surface. Stop the engine and push your motorcycle while applying the parking brake lever to check the efficacy of the parking brake.

If the efficacy of the parking brake becomes weak, have the brake adjusted by your dealer.