

Troubleshooting

Engine Will Not Start	P. 103
Starter Motor Operates But Engine Does Not Start	P. 103
Starter Motor Does Not Operate	P. 103
Overheating (High coolant temperature indicator is on)	P. 104
Warning Indicators On or Flashing	P. 105
Low Oil Pressure Indicator	P. 105
PGM-FI (Programmed Fuel Injection) Malfunction Indicator Lamp (MIL)	P. 105
ABS (Anti-lock Brake System) Indicator	P. 106

If the “-” Indicator is Blinking in the Gear Position Window While Riding	P. 107
Other Warning Indication	P. 108
Fuel Gauge Failure Indication	P. 108
Tire Puncture	P. 109
Electrical Trouble	P. 117
Battery Goes Dead	P. 117
Burned-out Light Bulb	P. 117
Blown Fuse	P. 121