

Instruments *(Continued)*

4 Backlight brightness L (low) adjustment:

You can adjust the brightness to one of five levels.

The backlight brightness L (low) can be adjusted in the same manner as H (high).

▶ L (low) can not adjust brighter than H (high).
Press the SET button. The brightness adjustment L (low) is set, and the display moves to the today date setting.

5 Today date setting:

- 1 Press the SEL button until the desired year is displayed.
 - ▶ Press and hold the SEL button to advance the year fast.



- 2 Press the SET button. The month digits start flashing.



- 3 Press the SEL button until the desired month is displayed.
 - ▶ Press and hold the SEL button to advance the month fast.



- 4 Press the SET button. The day digits start flashing.

