

Instruments (Continued)

- Press the SET button. The user setting mode color is set, and the display moves to the opening/ending display setting.

2 Opening/ending display setting:

You can set the STD or SP opening/ending display.

- Press the SEL button to select "STD" or "SP".



- Press the SET button. The opening/ending display is set.
 - When STD is set, the display returns to ordinary display.
 - When SP is set, the display moves to the inputting the opening message.

3 Inputting the opening message:

Opening message can input 6 letters for each 3 lines.

- Press the SEL button until the desired letter is displayed.
 - You can input the alphabetical letters, numbers and symbols. **➡ P.45**
 - Press and hold the SEL button to advance the letter fast.
 - The line number which is inputting the letters is displayed in the mileage area.

Line number

