


Instruments *(Continued)*

UNIT Setting Mode

1 Changing the speed and mileage unit:

- 1 Select the UNIT setting mode.  **P.36**
- 2 Press the SEL button to select either "mph" and "mile" or "km/h" and "km".
- 3 **When selecting the "mph" and "mile"**
Press the SET button. The speed and mileage unit is set, and the display returns to the ordinary display.

When selecting the "km/h" and "km"

Press the SET button. The speed and mileage unit is set, and then the display moves to the changing the fuel mileage meter unit.

2 Changing the fuel mileage meter unit:

- 1 Press the SEL button to select either "L/100 km" or "km/L".
- 2 Press the SET button. The fuel mileage meter unit is set, and the display returns to the ordinary display.