

Items		Frequency*1								Regular Replace	Refer to page	
		× 1,000 mi	0.6	4	8	12	16	20	24			
		× 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4			
Emission-Related Items	Fuel Line	↗			I		I		I		-	
	Throttle Operation	↗			I		I		I		122	
	Air Cleaner*2					R			R		93	
	Crankcase Breather*3			C	C	C	C	C	C		124	
	Spark Plug		Every 16,000 mi (25,600 km): I Every 32,000 mi (51,200 km): R									99
	Valve Clearance	↗					I				-	
	Engine Oil		R		R		R		R	1 Year	104	
	Engine Oil Filter		R				R				104	
	Clutch Oil Filter*7		R				R				106	
	Engine Idle Speed	↗			I		I		I		-	
	Radiator Coolant*5				I		I		I	3 Years	108	
	Cooling System	↗			I		I		I		-	
Evaporative Emission Control System*4	↗					I				-		

Maintenance Level

- ↗ : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (P. 167).
- ↘ : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I : Inspect (clean, adjust, lubricate, or replace if necessary)
- R : Replace
- L : Lubricate
- C : Clean