



8. Apply a thin coat of engine oil to the rubber seal of a new oil filter.
9. Install the new oil filter and tighten.

**Torque:** 19 lbf-ft (26 N·m, 2.7 kgf·m)

10. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

**Torque:** 22 lbf-ft (30 N·m, 3.1 kgf·m)

11. Fill the crankcase with the recommended oil (► P. 85, ► P. 174) and install the oil fill cap/dipstick.

### Required oil

#### When changing oil & engine oil filter:

3.6 US qt (3.4 L)

#### When changing oil only:

**NC700X** **NC750XA**

3.3 US qt (3.1 L)

**NC700XD** **NC750XD**

3.4 US qt (3.2 L)

12. Check the oil level. ► P. 102
13. Check that there are no oil leaks.
14. Install the lower cowl.