

Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence. ➤ P. 56
- Check that there is gasoline in the fuel tank.
- Check if the PGM-FI malfunction indicator lamp (MIL) is on.
 - ▶ If the indicator light is on, contact your dealer as soon as possible.

Starter Motor Does Not Operate

Check the following items:

- Check the correct engine starting sequence. ➤ P. 56
- Make sure engine stop switch is in the (Run) position. ➤ P. 50
- Check for a blown fuse. ➤ P. 146
- Check for a loose battery connection or battery terminal corrosion. ➤ P. 82, ➤ P. 94
- Check the condition of the battery.
 - P. 142

If the problem continues, have your motorcycle inspected by your dealer.