

▮ Odometer

Total distance ridden.

When "-----" is displayed, go to your dealer for service.

▮ Tripmeter A/B

Distance ridden since the tripmeter was reset.

When "----.-" is displayed, go to your dealer for service.

u **To reset the tripmeter:** (P26)

▮ Current fuel mileage

The current fuel mileage shows the current fuel mileage you are getting.

When your speed is less than 3 mph (5 km/h): "----.-" is displayed.

When "----.-" is displayed except for the above-mentioned cases, go to your dealer for service.