


## Gear position indicator



NC700X NC750XA


The gear position is shown in the gear position indicator.

- u “-” flashes when the ignition switch is turned on with the engine stop switch  (Off) position.
- u “-” appears when the transmission is not shifted properly.

NC700XD NC750XD

The gear position is shown in the gear position indicator when the D, S mode or MT MODE are selected.

- u “-” appears for a few seconds and then goes off when the engine starts.
- u “-” flashes when the engine stop switch position is changed from  (Run) to  (Off) position with the ignition switch on.

- u “-” flashes when the ignition switch is turned on with the engine stop switch  (Off) position.

The indicator may flash if:

- u The front wheel leaves the ground.
- u You turn the wheel while the motorcycle is upright on the stand.

This is normal. To operate the system again, turn the ignition switch off, then on again.

**If the “-” indicator is blinking in the gear position window while riding:** ( P127)