

Selecting the setting mode:

- !a Turn the ignition switch to on.
- !b Press and hold the SEL button and SET button until the ON/OFF setting display changes.
- !c Press the SEL button until the desired setting mode is displayed. When the SEL button is pressed, the setting mode will be changed.
- !d When the SET button is pressed, each setting mode will be changed.

To return to the ordinary display from the setting mode:

- The SEL button and/or SET button is not pressed for about 30 seconds.
 - Turn the ignition switch off and then on
 - Press and hold SEL button and SET button.
- While operating settings, each setting will be cancelled if the SET button is not pressed.