

Switches *(Continued)*

NC700XD

NC750XD

Parking brake lever and Release button

Be sure the parking brake is applied while parking and warming up the engine.

- u Make sure the parking brake lever is released before riding.

To apply the parking brake lock


Pull the parking brake lever back to lock the rear wheel.

- u Be sure the release button pops out and parking brake lever is not released.
- u The parking brake lock will not function if the parking brake is not adjusted properly. (P107)

To release the parking brake lock

Release the parking brake lever by lightly pulling in the lever (a) and pressing the release button (b).

- u Before riding, check that the parking brake indicator is turned off and make sure that the parking brake is fully released so there is no drag on the rear wheel.

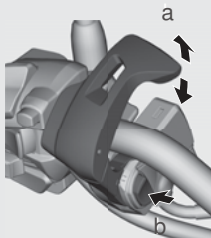

Hazard switch (P48)

Shift up switch (+)

To shift up the gear. (P62)

Headlight dimmer switch

- ☰☽ : High beam
- ☷☽ : Low beam



Turn signal switch

- u Pressing the switch turns the turn signal off.

Shift down switch (-)

To shift down the gear.
(P62)