
 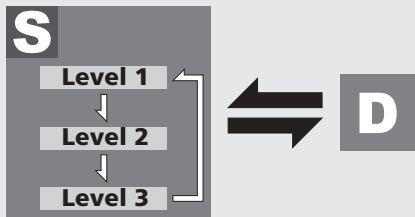
 


S mode level selecting while in AT MODE


While in S mode, press and hold the D/S side of the N-D (a) switch.

- u Close the throttle completely. Then select the desired level of the S mode.



-  Press and hold the D/S side of the N-D button
-  Press the D/S side of the N-D button

N-D switch

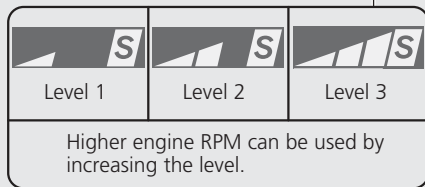

The selected level is maintained even when the ignition switch is turned off, or transmission is switched to out of S mode.