


Refueling

This motorcycle's rear seat must be opened for refueling.

Rear Seat

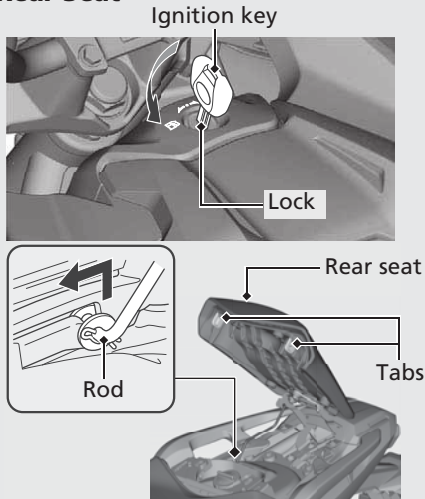

Open

- a Insert the ignition key into the lock, and turn the key counterclockwise.
- b Pull up the front of the rear seat.

Close

- a Pull the rod upward.
- b Push down on the front of the rear seat until it locks in place.
 - u Make sure that the tabs are locked securely in position by pulling up lightly on the front of the rear seat.
 - u The seat locks automatically when closed. Take care not to lock your key in the compartment under the rear seat.
- c Remove the key.