









Items		Frequency*1								Regular Replace	Refer to page
		x 1,000 mi	0.6	4	8	12	16	20	24		
		x 1,000 km	1.0	6.4	12.8	19.2	25.6	32.0	38.4		
Emission-related Items	Fuel Line 				I		I		I		-
	Throttle Operation 				I		I		I		117
	Air Cleaner*2					R			R		84
	Crankcase Breather*3			C	C	C	C	C	C		119
	Spark Plug	Every 16,000 mi (25,600 km): I				Every 32,000 mi (51,200 km): R					94
	Valve Clearance 						I				-
	Engine Oil		R		R		R		R	1 Year	99
	Engine Oil Filter		R				R				99
	Clutch Oil Filter*7		R				R				101
	Engine Idle Speed 				I		I		I		-
	Radiator Coolant*5				I		I		I	3 Years	103
	Cooling System 				I		I		I		-
Evaporative Emission Control System*4 						I				-	

Maintenance Level

-  : Intermediate. We recommend service by your dealer, unless you have the necessary tools and are mechanically skilled. Procedures are provided in an official Honda Service Manual (2 P. 162).
-  : Technical. In the interest of safety, have your motorcycle serviced by your dealer.

Maintenance Legend

- I** : Inspect (clean, adjust, lubricate, or replace, if necessary)
- R** : Replace
- L** : Lubricate
- C** : Clean