
## Removing & Installing Body Components u Lower Fairing

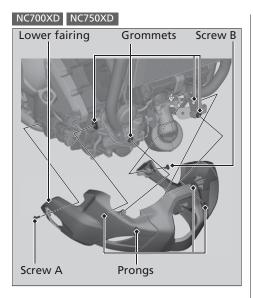

## Removal

- 1. Remove the screw A and B.
- **2.** Remove the lower fairing by releasing its prongs from the grommets.

## Installation

Install the parts in the reverse order of removal.