



8. Apply a thin coat of engine oil to the rubber seal of a new oil filter.
9. Install the new oil filter and tighten.

Torque: 19 lbf·ft (26 N·m, 2.7 kgf·m).
10. Install a new sealing washer onto the drain bolt. Tighten the drain bolt.

Torque: 22 lbf·ft (30 N·m, 3.1 kgf·m).

11. Fill the crankcase with the recommended oil (2 P. 81, 169) and install the oil fill cap/dipstick.

Required oil

When changing oil & engine oil filter:

3.6 US qt (3.4 liters)

When changing oil only:

NC700X **NC750XA**

3.3 US qt (3.1 liters)

NC700XD **NC750XD**

3.4 US qt (3.2 liters)

12. Check the oil level. 2 P. 97
13. Check that there are no oil leaks.
14. Install the lower fairing.