


Main Fuse

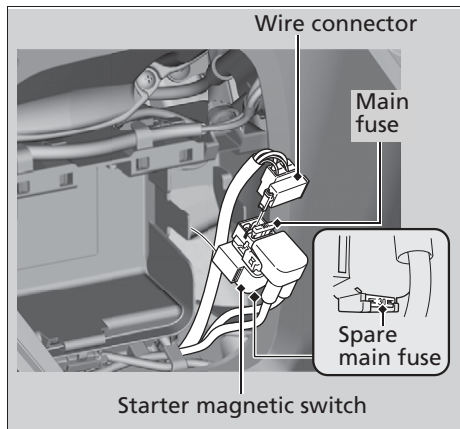

1. Open the luggage box. 2 P. 65
2. Remove the maintenance lid. 2 P. 93
3. Remove the battery. 2 P. 89

4. Disconnect the wire connector of the starter magnetic switch.
5. Pull the main fuse out and check for a blown fuse.
Always replace a blown fuse with a spare fuse of the same rating.
u Spare main fuse is provided in the starter magnetic switch.
6. Reinstall parts in the reverse order of removal.

NOTICE

If a fuse fails repeatedly, you likely have an electrical problem. Have your motorcycle inspected by your dealer.