


Inspecting the Brake Lever Freeplay


1. Place your scooter on its center stand on a firm, level surface.
2. Measure the distance of the front and rear brake levers before each brake starts to take hold.

Freeplay at the tip of the brake levers: 3/8 to 13/16 in (10 to 20 mm)

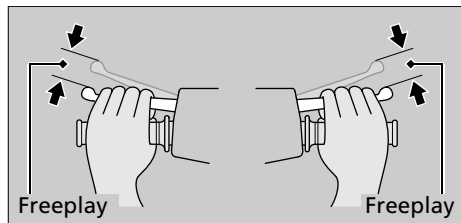

Adjusting Front Brake lever Freeplay

Adjust the freeplay of the brake lever with the front wheel pointed straight ahead. Make sure the cut-out on the adjusting nut is seated on the brake arm pin when adjusting the freeplay.

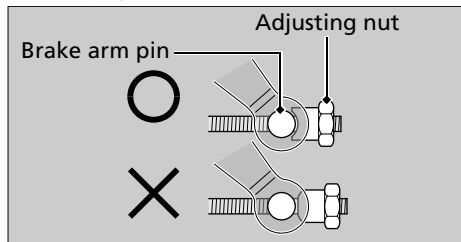

If proper adjustment cannot be obtained by this method, see your dealer.