


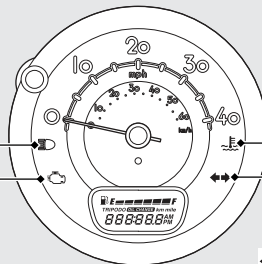
# Indicators

If one of these indicators does not come on when it should, have your dealer check for problems.

 **High coolant temperature indicator**

**If it comes on while riding: → P.89**

 **High beam indicator**



 **Turn signal indicator**

 **PGM-FI (Programmed Fuel Injection) malfunction indicator lamp (MIL)**

Comes on briefly when the ignition switch is turned to the ON position.

**If it comes on while engine is running: → P.90**