


## Ignition switch

Switches the electrical system on/off, locks the steering, and operates the seat opener switch.

- ▶ Key can be removed when in the OFF or  (Lock) position.

### ON

Turns electrical system on for starting/riding.

### SEAT

Operates the seat opener switch.

### OFF

Turns engine off.

### (Lock)

Locks steering.

