

## Refueling *(Continued)*

### Closing the Fuel Fill Cap

- ① After refueling, align the fuel fill cap latch with the slot in the filler neck. Push the fuel fill cap into the filler neck until it snaps closed and locks.
  - ▶ Make sure that the arrow mark on the fuel fill cap faces forward.
- ② Remove the ignition key.
  - ▶ The ignition key cannot be removed if the fuel fill cap is not locked.
- ③ Close the fuel lid.

## **WARNING**

Gasoline is highly flammable and explosive. You can be burned or seriously injured when handling fuel.

- Stop the engine, and keep heat, sparks, and flame away.
- Handle fuel only outdoors.
- Wipe up spills immediately.