


Maintenance Cover

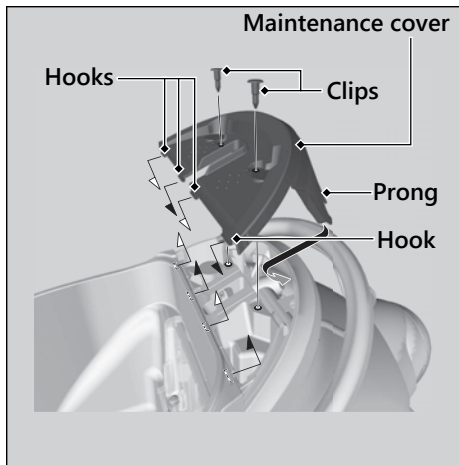

Removal

1. Open the seat. ► P. 39
2. Remove the clips. ► P. 68
3. Remove the hooks.
 - Remove the outside hooks at first, then remove the inside hooks.
4. Remove the maintenance cover by lifting it and removing the prongs from the body cover.

Installation

Install the parts in the reverse order of removal.