


# Indicators & Displays

## Drive Mode Indicator

The drive mode indicator shows the selected drive mode by the drive mode select lever (page 38).

### 4WD differential lock indicator

This indicator comes on when the differential gears are engaged.

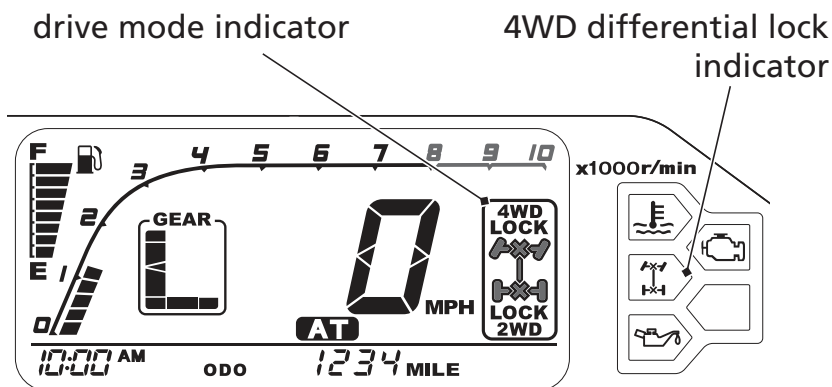

drive mode select lever position	<b>Turf</b>	<b>2WD</b>	<b>4WD</b>	<b>4WD Diff Lock</b>
drive mode indicator				
4WD differential lock indicator	No indicator light.			