

Air Cleaner Outer Cover Removal

Refer to *Safety Precautions* on page 111.

The air cleaner outer cover must be removed to replace the air cleaner and for spark plug maintenance.

Removal

1. Lift the cargo bed (page 69).
2. Remove the clips (page 130).
3. Remove the prong from the grommet.

Installation

1. Insert the prong into the grommet.
2. Install the clips.
3. Lower the cargo bed.

UNDER CARGO BED

