

Engine Oil & Filters

Changing Engine Oil & Filters

Refer to *Safety Precautions* on page 111.

Your Honda SXS's oil filter has very specific performance requirements. Use a new Honda Genuine oil filter specified for your model or a filter of equal quality.

NOTICE

Using the wrong oil filter may result in leaks or engine damage.

This procedure requires mechanical skill and professional tools such as a torque wrench, and access from underneath the vehicle, as well as the means for disposing of the drained fluid (page 215). If you do not have the skills or the tools, see your dealer.

This SXS1000 is equipped with two oil filters: an engine oil filter and a DCT (Dual Clutch Transmission) oil filter.

When changing the engine oil, also change the engine oil filter. Also change the DCT oil filter for every two times the engine oil is changed.

Drain the Engine Oil:

1. Make sure the Honda SXS is parked on a firm, level surface. Shift the shift select lever into the park (P) position, and jack up and support your Honda SXS (page 132).
2. Lift the cargo bed (page 69).
3. Remove the rear mudguard lid (page 129).

(cont'd)