

# Quick Reference

---

Scheduled Maintenance	Initial: <b>100 miles (150 km)</b> Regular: every <b>600 miles (1,000 km)</b>
Pre-drive Inspection	Each time before you drive (page 78): oil level, coolant, fuel level, brake fluid, tires, wheels, driveshafts, steering gearbox and boots, underbody, suspension, lights, controls, tie-rod ends, cargo, seat belts, side nets, exhaust system
Fuel/Capacity	Unleaded gasoline, pump octane number 86 or higher <b>7.9 US gal (30 ℓ)</b>
Engine Oil/Sub-Transmission Oil	API Service Classification SG or higher except oils labeled as energy conserving or resource conserving on the circular API service label, SAE 10W-30, JASO T 903 standard MA, Pro Honda GN4 4-stroke oil (USA & Canada) or Honda 4-stroke oil, or an equivalent Engine oil filter and oil exchange: <b>6.8 US qt (5.75 ℓ)</b> Engine oil filter, DCT oil filter and oil exchange: <b>6.1 US qt (5.8 ℓ)</b> Sub-Transmission oil exchange: <b>1.27 US qt (1.2 ℓ)</b>
Maximum Weight Capacity	USA - 49 states, Canada, Australia, New Zealand models: <b>1,649 lb (748 kg)</b> USA - 50 states [meets California] models: <b>1,248 lb (566 kg)</b> operator, passenger, all cargo and accessories