

Quick Reference

These symbols are used in Driver Controls section:

SYMBOL	COMPONENT	SEE PAGE
p	START — ignition switch	35
q	ON — ignition switch	35
w	OFF — ignition switch	35
t	OFF — headlight switch	36
i	Low beam — headlight switch	36
u	High beam — headlight switch	36
P, R, N, H, L	Park — Reverse — Neutral — High — Low — shift select lever	37
+	Up — right shift paddle	42
-	Down — left shift paddle	42