


Driver Controls

Headlight Switch (SXS1000M3L/M5L)

(SXS1000M3L/M5L)

The headlight switch is located on the right side of the shift select lever. This switch turns the headlights and taillights on and off, and changes between low beam or high beam.

For example, if you change the headlight position from OFF to HI, push the HI side of headlight switch twice. If you change the headlight position from HI to LO, push the OFF side of headlight switch once.

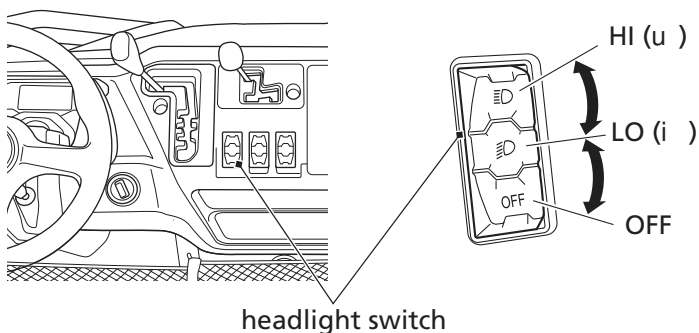

HI → LO → OFF
(u) ←--- (i) ←---

--> Push "u" side of headlight switch

-> Push "OFF" side of headlight switch

OFF — The headlights and taillights are off.

LO (i) — The headlights and taillights are on. The headlights are low beam.

HI (u) — The headlights and taillights are on. The headlights are high beam.