

# Driver Controls

---

## Ignition Switch

The ignition switch is a three-position, key-operated switch used to start and stop the engine.

**OFF (w)** — The engine and all electrical circuits are off. The key can be inserted and removed only when it is in this position.

**ON (q)** — The electrical circuits are on. You can use the accessory power socket in this position.

**START (p)** — This position is used only to start the engine. The key will automatically return to the ON (q) position when you let go of it.

