

Maintenance Component Locations

- > Indicates something visible.
-> Indicates something concealed.

rear suspension spring pre-load adjuster (SXS1000M3P/M3D only) (page 191)

