

Jack Up Point & Support Point

Refer to *Safety Precautions* on page 123.

When jacking up and supporting this vehicle, the following jack-up points and support points should be used.

3 WARNING

The vehicle can easily roll off a jack, seriously injuring anyone underneath.

Follow the directions for changing a tire exactly, and never get under the vehicle when it is supported only by the jack.

When using a jack, always abide by the following instructions.

- Do not leave the engine running.
- (SXS1000M3P/M3D/M5P/M5D only)
Move the drive mode select lever into 4WD Diff Lock position and move the shift select lever into the park (P) position.
- (SXS1000M3L/M5L only)
Move the drive mode select lever into *I* - 4WD position and move the shift select lever into the park (P) position.
- Use only on a firm level surface.
- Place a jack only at the specified jack-up point.
- Do not leave any person or cargo in the vehicle.
- Do not place any object above or under a jack.

