

# Engine Oil & Filters

*Install a New DCT Oil Filter:*

*Place shop towels under the oil filter cover because oil will flow out.*

12. Remove the DCT oil filter cover (DCT marked) and O-ring by removing the bolts. Let the remaining oil drain out. Discard the oil filter in an approved manner (page 231).

13. Apply engine oil to a new O-ring and install it to the DCT oil filter cover. Install a new oil filter.

Use only the Honda Genuine oil filter or a filter of equivalent quality specified for your model. Using the wrong Honda filter, inserting a filter in backwards, using a filter with no OUTSIDE markings, or a non-Honda filter which is not of equivalent quality may cause engine damage.

14. Install a new filter with the OUTSIDE mark facing outward, reinstall the spring and DCT oil filter cover making sure the bolts are tightened to the specified torques:

**9 lbf-ft (12 N·m, 1.2 kgf·m)**

## NOTICE

*Improper installation of the oil filter can cause serious engine damage.*

