

# Air Cleaner

---

## Cleaning Sub Air Cleaner

1. Remove the front hood (page 137).
2. Remove the clip (page 143).
3. Remove the sub air cleaner housing cover.
4. Pull the sub air cleaner out.
5. If there is any dirt or foreign object attached to the sub air cleaner, clean it by tapping it. If it is damaged or deteriorated, see your dealer for replacement.
6. Install the sub air cleaner.
7. Install the sub air cleaner housing cover and clip.
8. Install the front hood.

### UNDER FRONT HOOD

