

# Lubrication


---

## Lubrication Points

Lubricate the cargo bed strikers as shown in the following illustration.

Lift the cargo bed (page 81).

cargo bed strikers

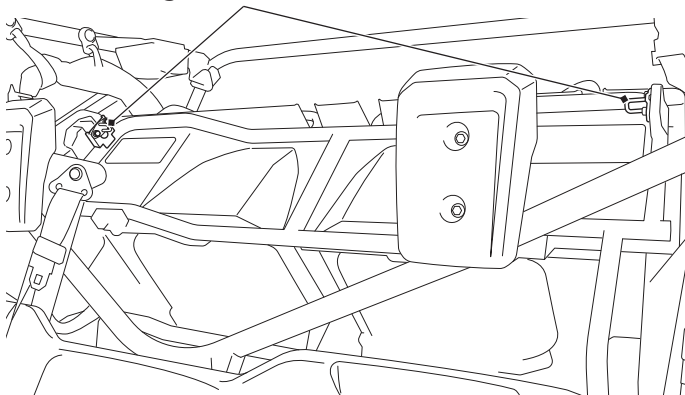

Lubricate the front seat latch as shown in the following illustration.  
Remove the front seat (page 139).

front seat latch

