

Instruments & Controls

The items listed below are described in this section.

Operation Component Locations	13
Indicators & Displays.....	17
Neutral Indicator.....	19
Reverse Indicator	19
Electric Power Steering (EPS) Indicator.....	19
High Coolant Temperature Indicator	19
PGM-FI Malfunction Indicator Lamp (MIL)	19
Seat Belt Indicator.....	19
Low Oil Pressure Indicator.....	20
Hill Start Assist (HSA) Indicator.....	20
I - 4WD Indicator.....	20
Clutch Temperature Indicator	20
FLV Warning Indicator (SXS1000S4D only).....	21
FLV SPORT Indicator (SXS1000S4D only)	21
FLV NORMAL Indicator (SXS1000S4D only).....	21
LAUNCH MODE Indicator (SXS1000S4D only).....	21
High Beam Indicator (SXS1000S4D only).....	21
Multi-function Display.....	24
Speedometer	25
Tachometer	26
Fuel Gauge.....	27
Odometer Display.....	28
Maintenance Minder Indicator	33
Digital Clock.....	34
Gear Position Indicator.....	35
AT Indicator / MT Indicator / LOW Indicator	36
SPORT Indicator	36
Drive Mode Indicator	37

(cont'd)