

# Doors

---

If the doors rattle when closed, turn the door stopper counterclockwise to adjust the doors. Each door has a double latching mechanism. Adjust the door stoppers so that it latches on the second click.

All doors can be adjusted in the same manner.

## Adjustment

1. Open the front door or rear door (page 51).
2. front door:  
Turn the door stopper counterclockwise to extend it, and clockwise to retract it.  
rear door:  
Turn the door stoppers counterclockwise to extend them, and clockwise to retract them.
3. Make sure the door is closed securely until the second latch click is heard.

## LEFT SIDE (right side similar)

