Storage Compartments

To open the document compartment, turn the knob clockwise. To close the document compartment, turn the knob counterclockwise.

