


Engine Oil & Filters

Drain the Engine Oil:

1. Make sure the Honda SXS is parked on a firm, level surface. Shift the shift select lever into the park (P) position.
 - It may be necessary to jack up and support your Honda SXS to change the oil and filter, see page 133.
2. Remove the air cleaner outer cover (page 131).
3. Remove the oil fill cap and dipstick (page 140).

IN FRONT OF CARGO BED

LEFT SIDE

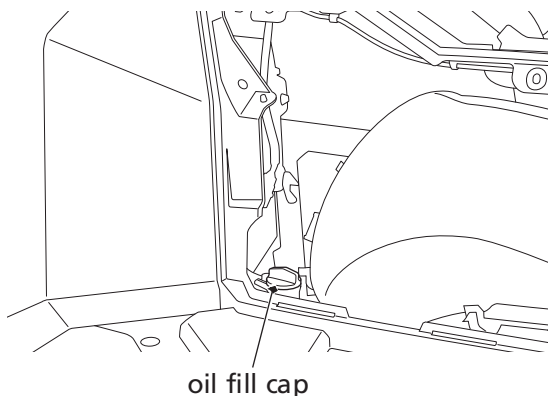

(cont'd)