


# Air Cleaner

---

5. Remove the housing seal from the air cleaner housing.

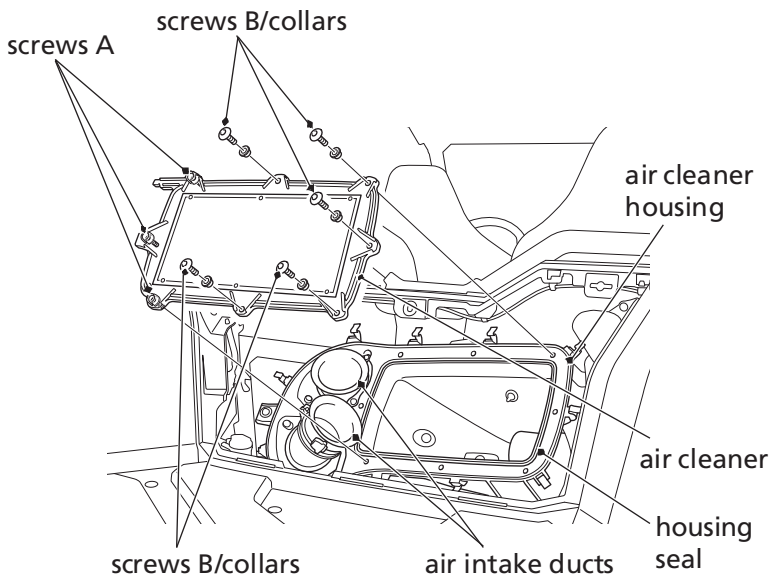

6. Install a new housing seal into the seal groove of the air cleaner housing.

7. Insert a new air cleaner into the air cleaner housing. Make sure that the air cleaner is properly seated in the air cleaner housing.

8. Install the collars and screws B and tighten the screws A and screws B to the specified torque:

**3.7 lbf·ft (5 N·m, 0.5 kgf·m)**

9. Install a new cover seal into the seal groove of the air cleaner housing cover.

10. Install the air cleaner housing cover and latch the retainer clips.

11. Install the air cleaner outer cover.