


Lubrication

Lubricate the shift select lever pivots as shown in the following illustration.

CENTER CONSOLE

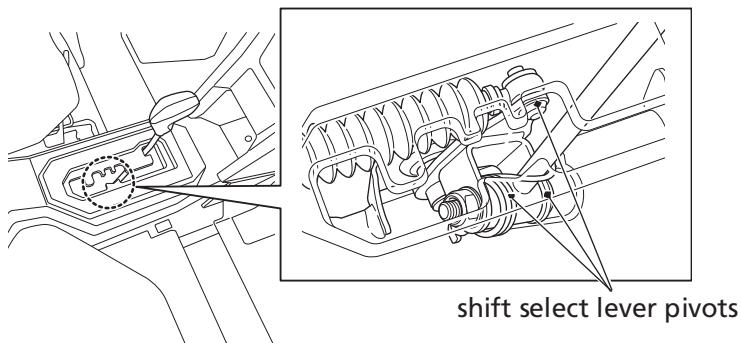

Lubricate each door latch as shown in the following illustration. Open the doors (page 51).

LEFT SIDE (right side similar)

